**VECTOR**OPTICS®

# FRENZY

RED DOT SIGHT USER MANUAL



FRENZY

## READ IT BEFORE USE!!!

READ AND UNDERSTAND THE CONTENTS OF YOUR FIREARM'S AND SCOPE MANUAL FOLLOW ALL STANDARD SAFETY PRECAU-TIONS AND PROCEDURES DURING FIREARM OPERATION

Scan the QR code to learn more about VectorOptics









NEVER LOOK AT THE SUN THROUGH THE RED DOT SIGHT (OR ANY OTHER OPTICAL INSTRUMENT). IT MAY PERMANENTLY DAMAGE YOUR EYES.

MAKE SURE FIREARMS ARE UNLOADED AND POINTED IN THE SAFE DIRECTION.

# **CONTENTS**

 
| FOOTPRINT                          | 4  |
|------------------------------------|----|
| MOUNTING                           | 5  |
| SCREWS                             | 6  |
| ZEROING                            | 7  |
| TURNING ON & ILLUMATION ADJUSTMENT | 8  |
| BATTERY EXCHANGE                   | 10 |
| MAINTENANCE                        |    |
| STORAGE                            | 12 |
| RETICLE                            |    |
| WARRANTY                           | 14 |
| NOTES                              | 14 |

### FOOTPRINT PATTERN













#### MOUNTING

The red dot sight is intended for use on pistol slides that possess provisions for subminiature optics. It adopts an industry-standard mounting interface and is compatible with the footprint that meets the criteria shown above. The red dot sight can also accept a picatinny or dovetail mount with a compatible footprint. Don't exceed 16 inches/pounds of torque on the mount's screws.

## SCREWS MAY COME WITH THE SIGHT: #1

|                   | #1            | #2         | #3            | ***           |   |
|-------------------|---------------|------------|---------------|---------------|---|
|                   | M3x0.5        | M3.5x0.6   | M3.5x0.6      | M4x0.7        |   |
|                   |               | -          | -             | •             |   |
|                   | -             | -          | -             | •             |   |
| Effective Length: | 11MM          | 8MM        | 10MM          | 7MM           | ı |
| Head Type:        | Light Tapered | Tapered    | Tapered       | Tapered       |   |
| Head Drive:       | Torx T10      | Torx T10   | Torx T10      | Torx T10      | ı |
|                   | #5            | #6         | #7            | #8            |   |
|                   | M4x0.7        | #6-32x0.35 | #6-32x0.45    | #6-32x0.45    |   |
|                   |               | ~          | ~             | ~             |   |
|                   |               | -          | ~             | ~             |   |
| Effective Length: | 8.5MM         | 7MM        | 9.5MM         | 9.5MM         | ı |
| Head Type:        | Tapered       | Tapered    | Light Tapered | Light Tapered |   |
| Head Drive:       | Torx T10      | Torx T10   | Torx T10      | Hexago        |   |

#4

#### ZEROING

The sight features elevation and windage adjustments. Referring to the point of impact you will need to adjust both windage and elevation screws. The elevation is the vertical (up and down) adjustment, usually on the top of the scope. Windage is the horizontal (left-to-right) adjustment, usually on the right of the sight.

With the sight is mounted aim at a target 100 yards away. Slowly shoot a small 3 to 5 round test group onto your target. Adjust windage & elevation screws in the direction you want to move the bullet impact. Should your impacts be below your point of aim, dial UP to reach zero. Should your impacts be left to your point of aim, dial R(right) to reach zero. Each adjustment moves the point of impact. Shoot another 3 to 5 round test group. Repeat until you are satisfied with the point of aim.

7

#### TURNING ON & ILLUMINATION ADJUSTMENT

The sight is activated by using the digital on/off switch placed on the left of the sight. The sight has 8 levels of visible dot & 2 NV dots. Press and hold the '+'switch for 1 second to turn the unit on. Subsequently press the switch will increase the dot intensity. Press the '-' switch will decrease the dot intensity. Press and hold the '-' switch for more than 3 seconds to turn the sight off.

Automatic Light Sensor (AUT): Some sights have AUT suffix which means Automatic Light Sensor mode. When the sight is on, press and hold the '+'switch for more than 4 seconds to switch from manual control to automatic light sense mode. The dot brightness is adjusted automatically based on ambient light conditions.

If the sight doesn't have a separate illumination switch to turn on or off. With a battery installed the sight will power on and adjust the brightness automatically based on ambient light conditions. When the protective cap is covered, the sight with intelligent power management will maximize the battery life. The battery life may vary according to the use, ambient conditions, and reticle intensity. Always install the protective cap on the sight for maximum battery life.

Motion Sensor Illumination (MOS): If the sight comes with this system, it will power on when it senses any motion and power down when it is at rest after 3 minutes.

Solar Power Engaged: It allows the red dot sight to continue to power on when the battery fails. You can still manually control the dot intensity by pressing the '+'or'-'switch

### **BATTERY EXCHANGE**

Your red dot sight is powered by 1 piece of the CR2032 button battery. Should the dot grow dim or not turn on, you will need to exchange the battery. To exchange the CR2032 battery, use the supplied hex key to loosen the two screws. Remove the sight from the mount. Take out the used battery, exchange it with a new one, and then assemble the sight again.



If your sight is battery side loaded, release the two screws on the battery compartment tray. Pry the tray out, put or replace a new CR1632 battery with positive '+' side facing upwards. Push back the tray and fasten the screws.



#### MAINTENANCE

Your red dot sight, though amazingly tough, is a precision instrument that deserves reasonable cautious care.

- When cleaning the lens, first blow away any dirt and dust, or use a soft lens brush.
   Fingerprints and lubricants can be wiped off with lens tissue, or soft cleancotton cloth, moistened with lens cleaning fluid.
- All moving parts of the red dot sight are permanently lubricated. Do not try to lubricate them.
- No maintenance is needed on the red dot sight's outer surface, except to occasion- ally wipe off dirt or fingerprints with a soft cloth.
- Use lens covers whenever convenient.

#### **▲** WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- DEATH or serious injury can occur if innested
- DEATH:or senous injury can occur it ingested.
   A swallowed button cell or coin battery can cause internal chemical burns in as little as
- 2 hours.
- · Keep new and used batteries out of reach of children
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted
  inside any part of the body.
- · Battery misue or abuse may result in leakage, fire or explosion.




#### STORAGE

Avoid storing the red dot sight in hot places, such as the passenger compartments of vehicles on hot days. The high temperatures could adversely affect the lubricants and sealants. A vehicle's trunk, a gun cabinet, or a closet is preferable. Never leave the red dot sight where direct sunlight can enter either the objective lens. Damage may result from the concentration (burning glass effect) of the sun's rays.

#### RETICLE

#### **Dot Size**

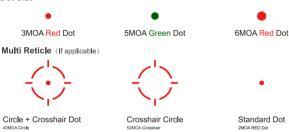



#### **VECTOR OPTICS TAILED VIP LIFETIME WARRANTY**

Your VectorOptics Continental, Taurus, Paragon, Scrapper, and Frenzy line products are covered by our T-VIP lifetime warranty. We will, at our option, either repair or replace your VectorOptics product without any cost if it is damaged or defective. If we can't repair your damaged product, we will replace it with a brand new one in perfect condition. We proudly stand behind our products. You have our word that we will do what it takes to retain your business as a satisfied customer. You can count on our T-VIP lifetime warranty.

- Unlimited full lifetime warranty.
- Reply to you in 1 working day.
- Free repair or replacement.
- Fully transferable.
- No invoice or receipt is needed.
- No question asked, however, we do appreciate your feedback.
- We pay for shipping back to you.

This warranty does not cover product loss, theft, deliberate damage, abuse, misapplication, or modification. This warranty does not apply to electronic components or batteries.

For warranty service please contact our Customer Service Department online at service@vectoroptics.com for return instructions. If you need to return the product, please ensure the shipment and keep the tracking records. We can not be responsible for your product until it has been received by our Customer Service Department.For products not directly purchased from us, please contact the local dealer for applicable warranty info.

Any warranty must be registered and complete warrantyterms by the link:

#### warranty.vectoroptics.com

We thank you for your business. Be Safe and Have Fun!



# FRENZY RED DOT SIGHT

Manual # Frenzy Series 2024051301



:www.vectoroptics.com
@vector optics